



BASCO INC


MEDICINE CABINET INSTALLATION INSTRUCTIONS

NOTE: Please read and follow instructions step-by-step. Improper installation will cause door misalignment and cabinet frame warpage.

TOOLS NEEDED

- Safety Glasses
- Level
- Phillips Head Screw Driver
- Measuring Tape
- Square
- Electric Drill
- Pencil

RECESSED CABINET INSTALLATION

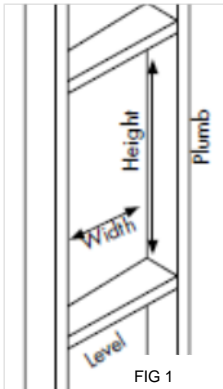

Note: Cabinet may be mounted so door opens left to right or right to left. Not includes Tilting Mirror Cabinets.

1. Prepare rough opening for cabinet. See charts below for cabinet model and wall opening.
2. Provide clearance slots for four (4) hinge sheet metal screws and two (2) magnetic touch latch sheet metal screws.
3. Use four (4) #10x2" Phillips head screws (supplied) to mount cabinet into wall opening.
4. Use Level and Square to make sure cabinet properly aligned.

Note: DO NOT tighten screws more than necessary. Special care MUST be taken to insure that cabinet is mounted plumb and true. Over tightening and improper mounting will result in cabinet distortion and poor door alignment. Wall opening dimensions MUST be held closely to allow proper installation. See FIG 1.

5. The cabinet door may be adjusted slightly toward or away from the cabinet by loosening four (4) hinge screws. Tighten screws when the adjustment is complete. Only available Flush Mount (FM), Semi Recessed (SR), Wall Mount (WM) and all Tri-View Cabinets with European style hinges.

SURFACE MOUNT CABINET INSTALLATION

Note: Model Numbers _ _ _ _ XX- _ are replaced by Partially Recessed (PR) or Surface Mount (SM).

1. Position cabinet at desired location. Place a level at top of the cabinet to make sure it is straight. Use pencil to trace top and bottom outlines of the cabinet.
2. Cabinet still held in place, open the door, using pencil mark the holes on the supporting wall.
3. Set cabinet a side. Drill pilot holes into pencil marks on wall.
4. Position the cabinet back on wall, line up installation holes.
5. Drive screws into each hole to secure the cabinet to the wall.

WALL OPENINGS

For cabinet wall openings info, please click related link below, or visit our website <http://bascoinc.com/> for Technical Data Sheets.

Slim Line 2" Semi-Recessed Series Medicine Cabinets

http://bascoinc.com/prod/medcab/tds/sl/SR_Series.pdf

3" Recessed Series Medicine Cabinets

http://bascoinc.com/prod/medcab/tds/ssf/REC_SS_FRAME_c.pdf

http://bascoinc.com/prod/medcab/tds/pe/REC_BEV_POL_EDGE.pdf

Slim Line Series 3-1/4" Fully Recessed Medicine Cabinets

http://bascoinc.com/prod/medcab/tds/sl/FM_Series_c.pdf

Slim Line 3-1/2" Deep Surface Mounted Series Medicine Cabinets

http://bascoinc.com/prod/medcab/tds/sl/WM_Series.pdf

5" Deep Wall Mounted Series Medicine Cabinets

http://bascoinc.com/prod/medcab/tds/ssf/SURF_SS_FRAME.pdf

<http://bascoinc.com/prod/medcab/tds/ssf/384p-w.pdf>

Surface Mount with Top Light

http://bascoinc.com/prod/medcab/tds/sml/TL-SM_SERIES_c.pdf

Bi-View (Two Door) Medicine Cabinets

<http://bascoinc.com/MCBiview.htm>

Surface Mounted Tri-View Medicine Cabinets –SM Series, 5-1/4" Deep

http://bascoinc.com/prod/medcab/tds/tv/Triview_SM_Series.pdf

Surface Mounted Tri-View Medicine Cabinets –LC Series (Integrated Light Fixture), 5-1/4" Deep

http://bascoinc.com/prod/medcab/tds/tv/Triview_LC_Series.pdf

Fully Recessed Tri-View Medicine Cabinets, 3-1/4" Recess

http://bascoinc.com/prod/medcab/tds/tv/Triview_FR_Series.pdf

Partially Recessed Tri-View Medicine Cabinets, 3" Recess

http://bascoinc.com/prod/medcab/tds/tv/Triview_PR_Series.pdf

Corner Medicine Cabinets

http://bascoinc.com/prod/medcab/tds/crn/CR_Series.pdf